


TOOLS REQUIRED

- ⇒ Ladder
- ⇒ Squeegee (supplied with your wallpaper order)
- ⇒ Stanley knife
- ⇒ Masking tape
- ⇒ Metal ruler
- ⇒ Laser level
- ⇒ A mate who you bribe :)

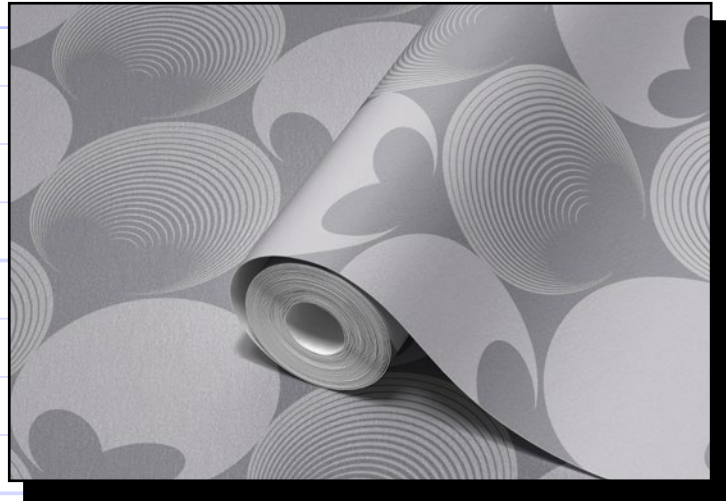

WALL PREPARATION

- ⇒ If the wall was recently painted, please wait 30 days for it to cure and out-gas.
- ⇒ Check the wall for any peeling paint, cracks, remove any wall hooks, light switch plates, power point plates etc.
- ⇒ Clean the wall to remove any oil, dirt or dust using a warm, damp microfibre cloth. Do not use any cleaning products and let the wall dry for 24 hours.
- ⇒ If you are unsure of the paint that was used on the wall (wallpaper will not adhere to Wash & Wear or Teflon paints), please prime the wall using **Viponds Self Adhesive Prep Coat**.

HOT TIPS TO REMEMBER

WALL TYPES ↙

Our wallpaper **will not** stick to textured walls, and we don't recommend application to walls above fireplaces.

CLEANING ↙

If you need to spot clean your wallpaper, please do so by wiping gently with a damp microfibre cloth. Do not use any soap or cleaning products and do not rub excessively.

REMOVING ↙

To remove wallpaper, carefully use the tip of a blade to lift a corner of the wallpaper and peel back slowly.

HELP ME!

Never fear! You can hire one of our Boom Room fam professionals who know our product well to install your wallpaper.


VIC –

Shane Harrison 0478 617 322 signtolgy@live.com
 Dylan Lee 0419 610 482 info@popcollective.net.au

NSW –


Vince Cerone 0449 818 430 info@encore signage.com
 Matt Castle 0414 639 167 mattprojx@gmail.com

1

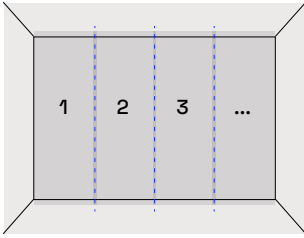

Arrange your drops ready for installation, we recommend rolling them out on the floor and arranging in sequential order, to ensure no mistakes are made with the roll order.


2

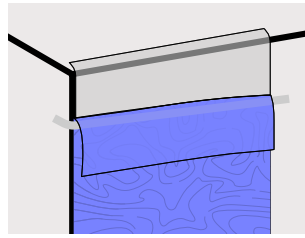

Beginning with drop 1, peel back the liner on the wallpaper about 20cm and crease the under-liner.


The next step is crucial as it will set up the entire wall, no pressure!

3

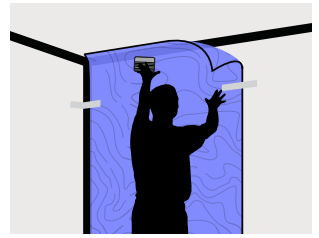


Line drop 1 up with the top left corner of your wall (overhanging about 30mm above the cornice) and with the left vertical line of your wall. Ask your install assistant to align the wallpaper at the bottom of the wall to ensure it is hanging straight. Use a laser level to make sure it is square with the wall.

4

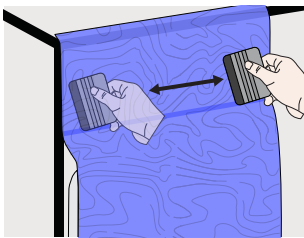


Once you are happy with the position, begin sticking the 20cm of exposed wallpaper to the wall - peel, stick & smooth, pressing down firmly with your squeegee. Repeat this process until drop 1 is fully installed.

5

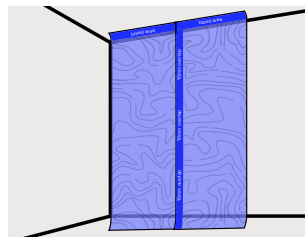

Begin to line up drop 2 by aligning at the top of the wall and the bottom. All drops are printed with a 10mm overlap, place drop 2 over the right edge of drop 1, ensuring that the pattern is lined up.

6

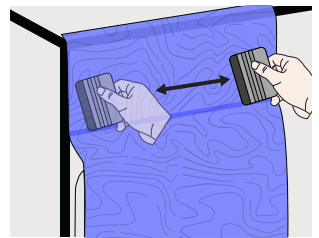


Peel, stick and squeegee all sequential drops using same process as drop 1.

7



Once the entire wall is fully installed and you are satisfied with your work, you can go ahead and trim off excess at the top and bottom of your walls. Make sure to use a very sharp Stanley knife (replace blades as you go if required) and metal ruler to steady it.

8

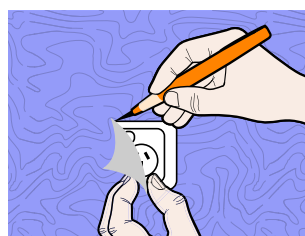

Trim around power points, light switches again only once the wallpaper is fully installed.

9

Stand back and admire your awesome work!

:)